



### 1. ISOLATION LAYER

PLACE CONTINUOUS ISOLATION LAYER BETWEEN EXTRUDED BAR AND SUBSTRATE TO REDUCE CORROSION BETWEEN TREATED WOOD (ACQ) OR CONCRETE. NO ISOLATION LAYER IS REQUIRED BETWEEN EXTRUDED BAR AND METAL DECK OR NON-TREATED LUMBER.

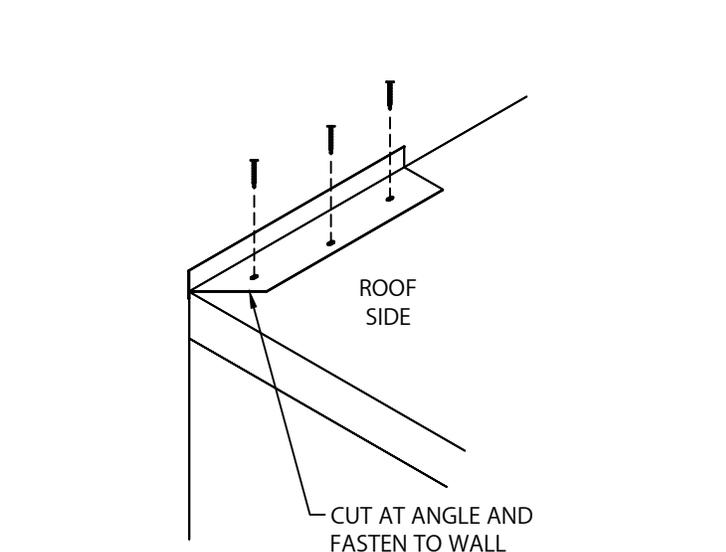


### 2. OUTSIDE MITER FABRICATION

CUT A PIECE OF ELIMINAILER T (ANY LENGTH) ON AN ANGLE. FASTEN TO WALL AT CORNER WITH PROVIDED FASTENERS.

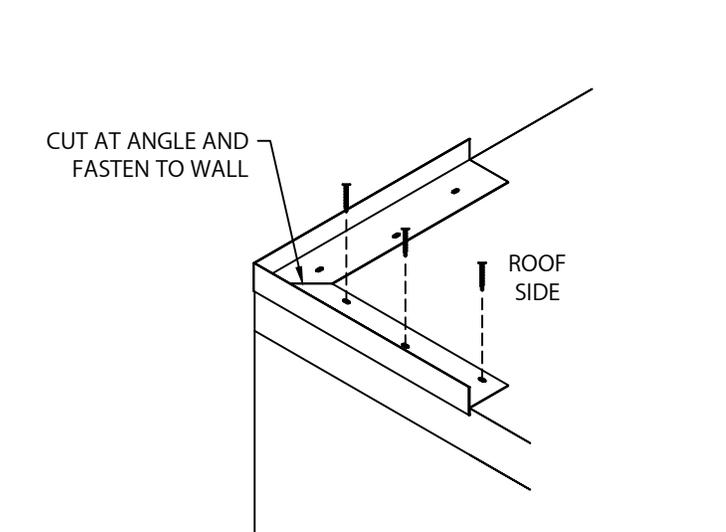

### 3. OUTSIDE MITER FABRICATION

CUT A SECOND PIECE OF ELIMINAILER T (ANY LENGTH) ON AN ANGLE TO FORM A COMPLETE MITER. FASTEN TO WALL AT CORNER WITH PROVIDED FASTENERS.

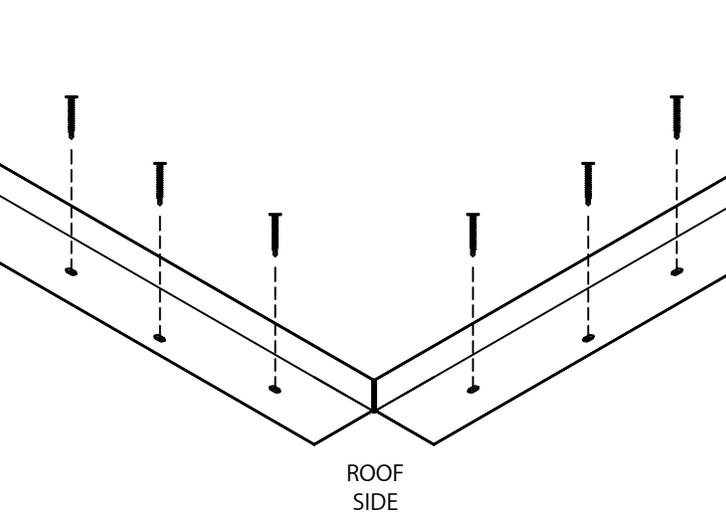

### 4. INSIDE MITERS

NO BAR CUTTING IS NEEDED FOR INSIDE MITERS. SIMPLY BUTT FULL SIZE BARS TIGHT INTO CORNER AND FASTEN TO WALL WITH PROVIDED FASTENERS.



polyglass.us  
1111 West Newport Center Drive  
Deerfield Beach, FL 33442  
Technical Service: (866) 794-9659  
technical@polyglass.com

DATE: 03/02/22  
DRN BY: MLM  
CKD BY: MM


SHT.# 1 OF 2  
DWG# 45118-37601

A



# POLYFORZA NAILER


## INSTALLATION INSTRUCTIONS

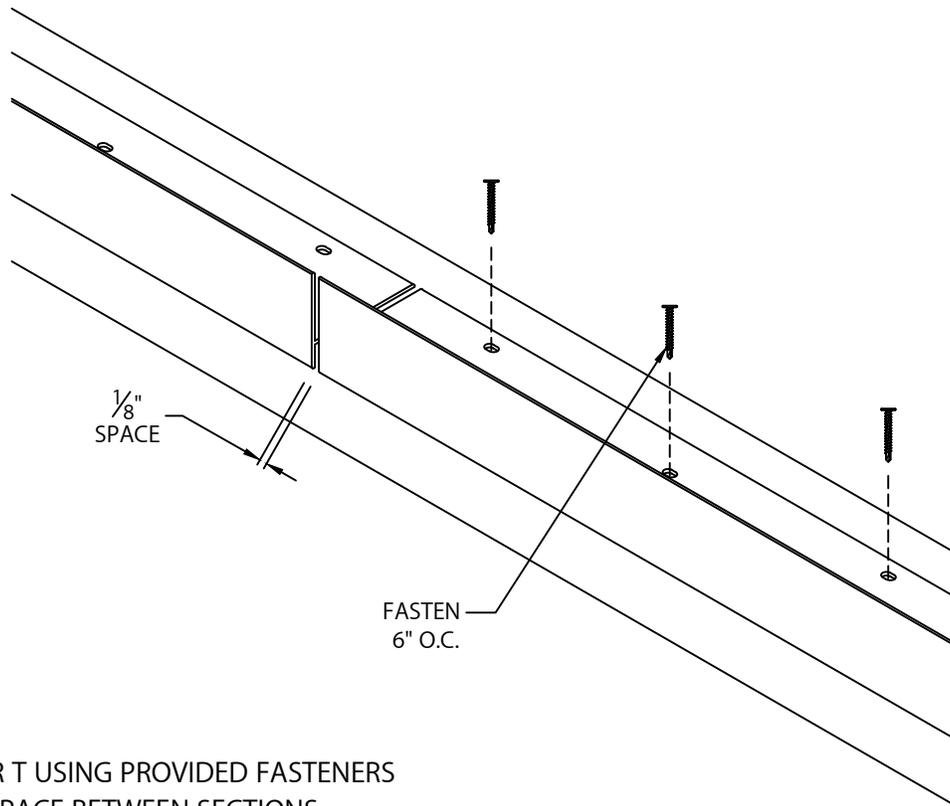


### 5. ELIMINAILER T

FASTEN ELIMINAILER T USING PROVIDED FASTENERS  
6" O.C. LEAVE A 1/8" SPACE BETWEEN SECTIONS.

#### TYPICAL INSTALLATION FOR USE WITH EXISTING WOOD NAILER

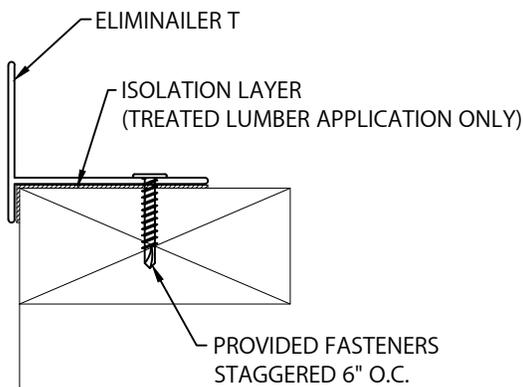

#### TYPICAL INSTALLATION FOR USE WITH METAL DECK OR MASONRY WALL

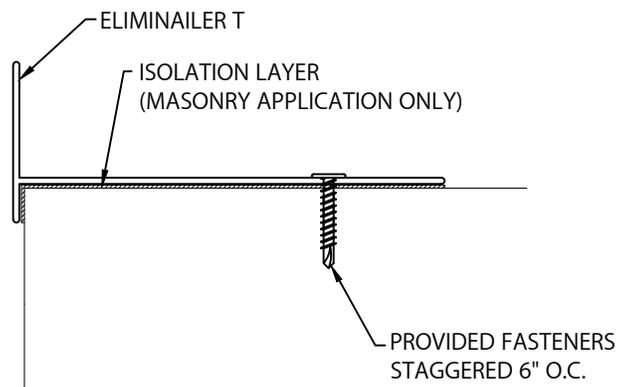

polyglass.us  
1111 West Newport Center Drive  
Deerfield Beach, FL 33442  
Technical Service: (866) 794-9659  
technical@polyglass.com

DATE: 03/02/22  
DRN BY: MLM  
CKD BY: MM

SHT.# 2 OF 2  
DWG# 45118-37601

A